



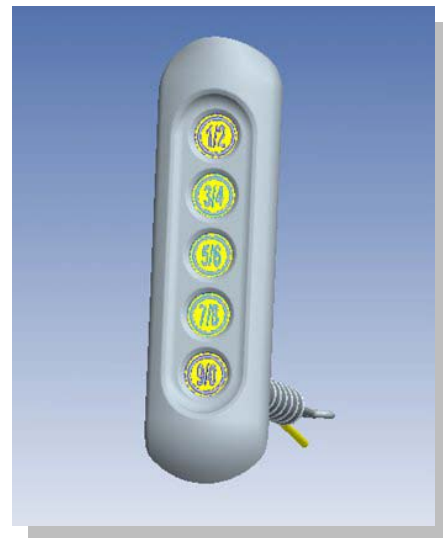

500 Bailey Avenue
P.O. Box 350
New Hampton, Iowa 50659 U.S.A.
Tel: 641-394-3188
Fax: 641-394-2392
www.trimarkcorp.com

Discrete/CAN Communication Configuration on Keypad (22577-xx, 24295-xx, 24296-xx, 29087-xx)

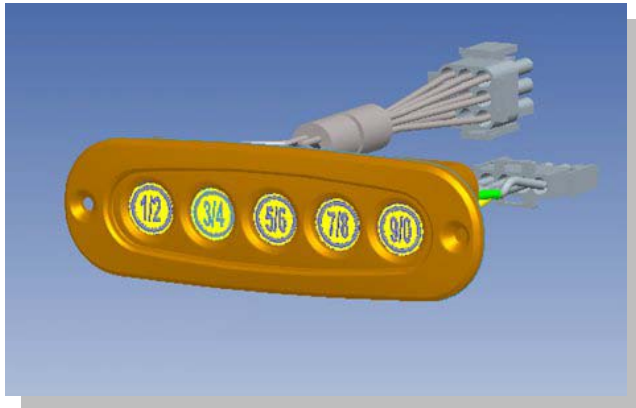

To **DISABLE** CAN communications:

1. Disconnect power from the keypad.
2. Connect yellow wire of 9-pin connector (or loose yellow wire if no 9-pin connector is present) to GND (Black).
3. On 4-pin connector: connect WHITE wire to BLACK and GREEN wire to +12V (RED).
4. Provide POWER (Red) and GND (Black) to keypad.
5. Keypad will beep for five (5) seconds and then provide 5 short beeps.
6. Disconnect all wires from power and GND (yellow, red, black, white and green).
7. Reconnect harness and power up keypad normally.

To **ENABLE** CAN communications:

1. Disconnect power from the keypad.
2. Connect yellow wire of 9-pin connector (or loose yellow wire if no 9-pin connector is present) to GND (Black).
3. On 4-pin connector: connect WHITE wire to +12V (RED) and GREEN wire to BLACK.
4. Provide POWER (Red) and GND (Black) to keypad.
5. Keypad will beep for five (5) seconds and then provide 2 short beeps.
6. Disconnect all wires from power and GND (yellow, red, black, white and green).
7. Reconnect harness and power up keypad normally.