




500 Bailey Avenue
P.O. Box 350
New Hampton, Iowa 50659 U.S.A.
Tel: 641-394-3188
Fax: 641-394-2392
www.trimarkcorp.com

Disable CAN Communication on Keypad (22577-xx, 24295-xx, 24296-xx, 24297-xx)

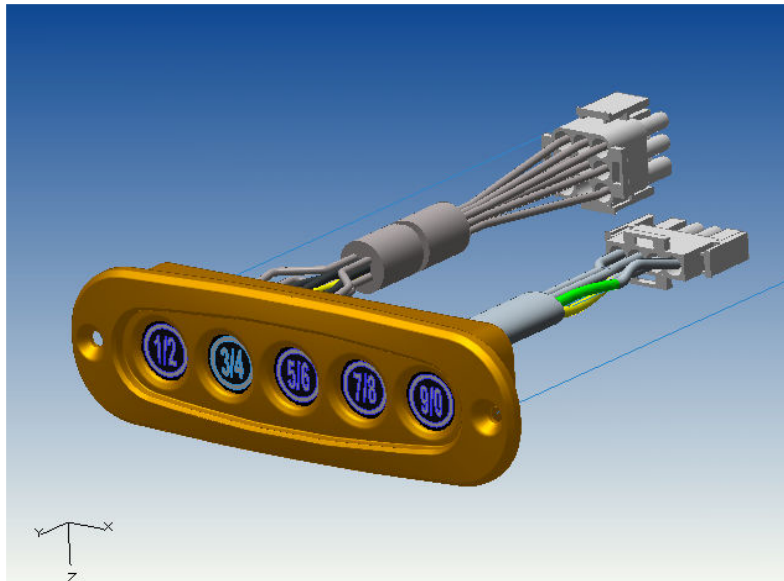

1. Disconnect power from the keypad.
2. Connect yellow wire of 9-pin connector to GND.
3. On 4-pin connector: connect white wire to GND and green wire to +12V.
4. Provide power and GND to keypad (black and red wires)
5. Keypad will beep for five (5) seconds and then provide 5 short beeps.
6. Disconnect all wires from power and GND (yellow, red, black, white and green).
7. Power up keypad.

* This process toggles system between CAN enabled and CAN disabled.